


C	1	2	4	9	12	13	21	19	18	22	6	34	36	37	38	40	46	44	41	39	49	51	52	54	56	57	61	63	59	58	62	64	69	66	68	76	67	72	75	73	74	83	77	82	79	81	C
L	29	1	2	3	8	9	10	5	4	6	7	12	9	14	13	18	19	16	17	23	21	26	27	22	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	L
R	41	2	5	3	11	7	8	6	12	9	37	14	36	21	4	18	20	22	19	23	24	38	32	26	27	29	31	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	28	R
MISC	V1a	V1b	S2a	S2b	V2	S2c	S2d	S2f	S2e	S2g	V3	V4b	V4c	V4a	S2h	V4d	V4d	T1	V5	PL1	V6	PL2	T2	HEAT FUSE	S1a	S1b	MISC																				

A 262

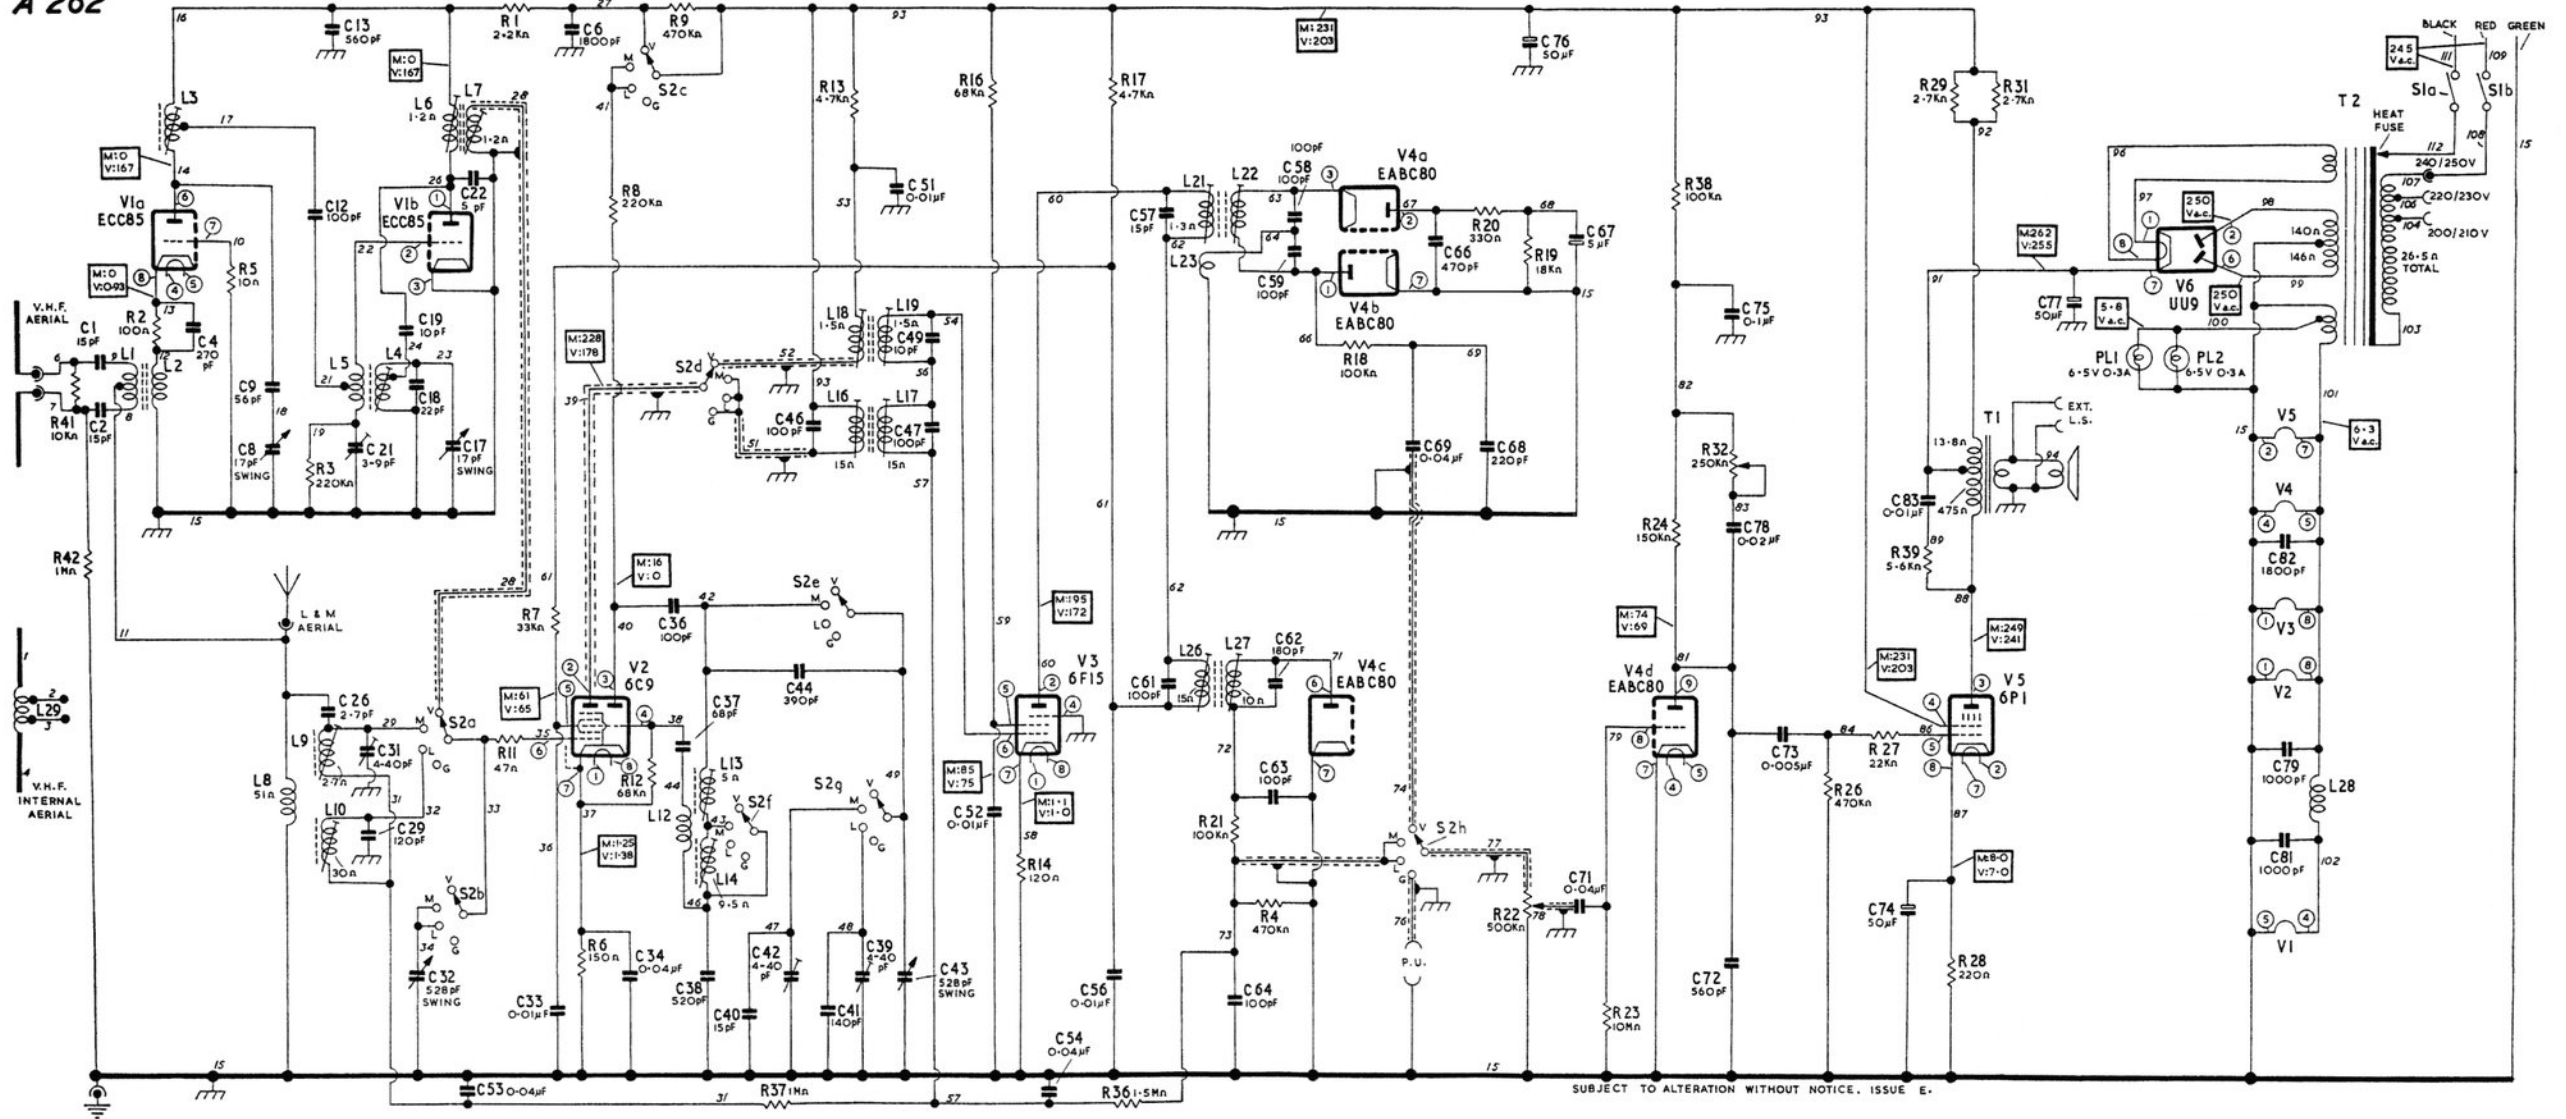

The wave-band switch (S2a-S2h) is shown in the L position.

Circuit voltages are shown within rectangles and were measured under no-signal conditions using a 20 K Ω /V meter, with the receiver switched first to the M band and then to Band II. Where readings differ appreciably, both are quoted with the M band reading at the top. Where the resistance of a coil is less than one ohm, the value is omitted.

Component terminals and connecting leads are identified by test point (t.p.) numbers which correspond with those appearing on the chassis diagrams. The valve pin numbers are shown in small circles.

NOTE. In later sets, C62 is fitted inside the i.f.t. can.